



INSTRUCTION MANUAL

■ OIL-FREE SCROLL TANK MOUNT AIR COMPRESSOR

SLT-2/3/5/10D

SLT-2H/3H/5H/10DH

SLT-2/3/5/10D-FM

SLT-2H/3H/5H/10DH-FM

SLT-5-FRD

Thank you for purchasing our oil-free scroll air compressor.

- Before operation, be sure to read this instruction manual thoroughly for safe and efficient use for a long operating lifetime.
- After reading it, store in a convenient place for immediate and future reading.

Before use, be sure to fill in the blank spaces below for future repair and after service.

MODEL	
SERIAL No.	
Purchased from	
Date of purchase	
Date of use	

Important information-Safety precautions

■ Important information

Be sure to read and understand this instruction manual.



The operator shall be fully conversant with the requirements stated within this instruction manual including important warnings, cautions and operation.

The marks and symbols have the following meanings.






Keep this booklet in an appropriate place for immediate reference.

- Indications of warnings and cautions

 WARNING	Indicates a potentially hazardous situation which, if not avoided, will result in serious injury or loss of life.
 CAUTION	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or property damage.

- Examples of warnings and cautions

	Indicates「You must be careful」. We will explain briefly in or near the symbol. (The example on the left is [Be careful about electric shock])
	Indicates「You must not do」. We will explain briefly in or near the symbol. (The example on the left is [Do not touch]).
	Indicates 「You must do」. We will explain briefly in or near the symbol. (The example on the left is [Be sure to ground it]).

* We shall not be responsible for any injury or damage caused by disregard of warnings, cautions or instruction.

Important information-Safety precautions

▪ Safety precautions

WARNING



Install in a safe area.

Install in an area which is free of volatile, flammable gases or organic solvents.
They can cause explosion or fire.



Never install outdoors.

Do not install outdoors (This compressor is not water-proof)
If water splashes on electric equipment, it can cause electric shock or fire.



Turn off main electric source.

Be sure to turn off main electric source before inspection or wiring unit.
If not, it can cause electric shock or serious bodily injury.



Ask qualified electrician.

Ask qualified electrician to perform electric wiring job.
If not, it can cause electric shock or fire.



Be sure to ground.

Be sure to do the grounding job.
If not, it can cause electric shock or fire.



Never use to compress anything other than air.

If done, it can cause explosion, fire or damage.



Never use with respiratory equipment which directly intakes compressed air.


If done, it can cause serious bodily injury.

Important information-Safety precautions

WARNING


 **Never use with equipment which is directly concerned with human life.**

If done, it can cause serious bodily injury.

 **Never touch**

Never touch turning parts (fan, pulley and belts) while main electric source is turned on.

If done, it can cause serious injury including entanglement of fingers or hands.

 **Release pressure**

Be sure to release pressure from air receiver and make sure there is no pressure inside before conducting any maintenance or inspection.

If not, parts can scatter and can cause serious injury.

 **Conduct maintenance and inspection**

Conduct maintenance and inspection according to maintenance standards.

If not, it can cause fire and failure.

Important information-Safety precautions

CAUTION

 **Use at ambient temperature of 36 degree F to 104 degree F**

Drain will freeze at less than 36 degree F and cause failure.
More than 104 degree F will cause shorter lifetime or damage to unit.

 **Use in an area which is free of dirt or dust.**

If done, it can cause failure.

 **Use at an area which is free of corrosive gas.**

If done, it can cause failure.

 **Ask specialist to perform repairs.**

If not, it can cause failure and shorter lifespan.



Never touch.

Never touch each section of compressor during operation or soon after operation.
If done, it can cause burns.

 **Never alter the compressor.**

If done, it can cause damage or shorter lifespan.

 **Use genuine parts.**

Be sure to use our genuine parts when replacing parts during maintenance.
If not, it can cause failure or shorter lifespan.

Contents

Important information-Safety precautions

- Important information -----1
- Safety precautions-----2

Contents

- Contents -----5

Before use

- Inspect the product -----6

Installation

- Precautions about installation -----7
- Piping -----8
- Electrical wiring -----9

Operation

- Before start up -----11
- Start-up and operation -----11

Maintenance

- Maintenance standards -----13
- How to carry out maintenance -----16

Troubleshooting guide

- Compressor -----17
- Auto drainer (Option) -----17
- Refrigerated Dryer (Option) -----17

Specifications

- Compressor specifications -----18

Appendix

- Outer dimensions -----23
- Circuit diagram -----26

Warranty


- Warranty and remedies -----30

Before use

- Inspect the product

- Check that model name of the product is as you ordered.

Model name description;

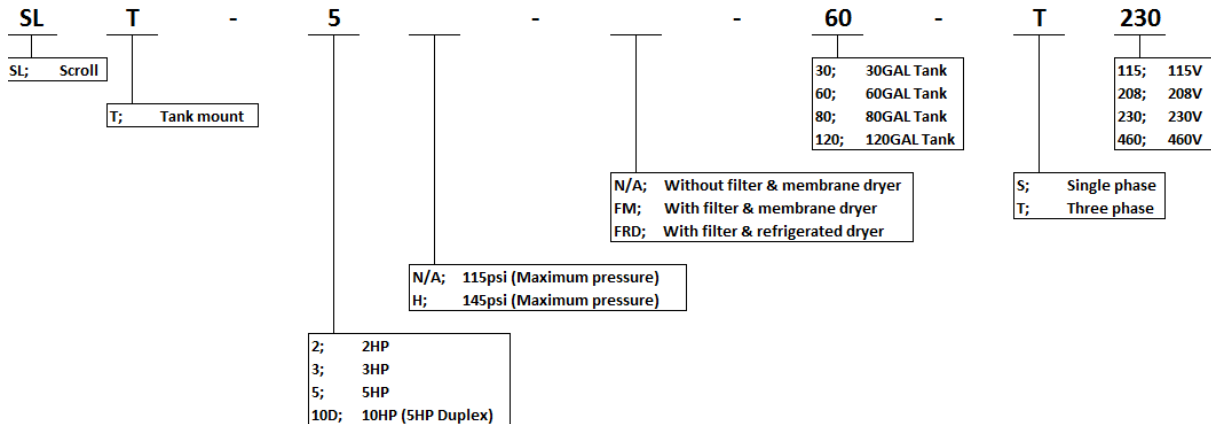

- Check that there is no deformity or damage which occurred during shipment. Any shipping damage must be immediately filed with the freight carrier.
- Check that the following accessories are included.
 - Compressor instruction manual
 - Scroll pump instruction manual
 - Auto drainer instruction manual
 - Membrane dryer instruction manual (-FM units)
 - Refrigerated dryer instruction manual (-FRD units)
 - 4 vibration mats
 - Wiring schematic

Installation

- Precautions about installation



WARNING

Do not use in an area which is exposed to rain, steam or high humidity.

High Humidity can cause electric shock or fire.

Do not install in an area with corrosive gas (ammonia, acid, salinity, ozone gas and sulfur dioxide).

If done, it can cause shorter lifespan.



WARNING

Install in an area which is free of explosive, flammable gases or organic solvents.

If done, it can cause explosion and fire.



Ambient temperature

Use at ambient temperature of 36 degree F to 104 degree F.

Less than 36 degree F will cause failure or freezing.



CAUTION

Install this product on a flat floor.

If not, it may cause vibration and noise and shorten lifespan.



CAUTION

Install in an area which is free of dust.

Dust can cause increase temperature and wear, resulting in shorter lifespan and failure.

Installation

- Installation space

Secure the space around compressor for safe, inspection and maintenance.

Installation space (inch)	
Above	24
Each Side	20

- Ventilation

When using in totally closed room, install fan for ventilation.

Model	British Thermal Unit (BTU)
SLT-2**_***	5120
SLT-3*_***	7680
SLT-5*_***	12800
SLT-5*-FRD	13690
SLT-10D*_***	25600

- Piping

- Do not use any steel pipe and a smaller size than the compressor outlet connection.
- Connect the auto drain as an accessory to the drain plumbing underneath the tank properly.
- When there is any riser piping, be sure to install drain collector or drain valve.

Installation

- Electrical wiring

- Precautions about wiring



Turn off main electric source.

Be sure to turn off main electric source before inspection or wiring job.

If not, it can cause electric shock or serious bodily injury.



Ask qualified electrician.

Ask qualified electrician to perform electric wiring job.

If not, it can cause electric shock or fire.



Be careful about wiring.

Do not use cable of less than designated size.

If done, overheat of cable can cause fire.



Be sure to ground.

Be sure to do the grounding on the wiring job.

If not, it can cause electric shock or fire.

- Wiring

Be sure to use the fork, pin or blade terminal to firmly connect the electric source to the designated place of the magnet switch or terminal in the control box. Please refer to the circuit diagram shown in Appendix.

- 115V/208V-230V, 1PH, 60Hz

Motor Size (HP)	Power (V/PH)	Motor Load (FLA)	Non-time Delay Fuse (A)	Time Delay Fuse (A)	Inverse-time circuit breaker (A)
2	115/1	24	60	45	60
	208/1	13.2	35	25	35
	230/1	12	30	25	30

Installation

- 208V-230V/460V, 3PH, 60Hz

Motor Size (HP)	Power (V/PH)	Motor Load (FLA)	Non-time Delay Fuse (A)	Time Delay Fuse (A)	Inverse-time circuit breaker (A)
2	208/3	7.5	20	15	20
	230/3	6.8	20	15	20
	460/3	3.4	15	15	15
3	208/3	10.6	30	20	30
	230/3	9.6	25	20	25
	460/3	4.8	15	15	15
5	208/3	16.7	45	30	45
	230/3	15.2	40	30	40
	460/3	7.6	20	15	20
10 (5HP x 2)	208/3	33.4	90	60	90
	230/3	30.4	80	60	80
	460/3	15.2	40	30	40

- Auto drainer

Connect the power cable with a plug to the outlet as below.

Supply voltage; 230 / 115 / 24 / ...VAC / 24 VDC \pm 10%, 50 - 60 Hz

115VAC \pm 10%, 50 - 60 Hz (Only small tank model)

- Refrigerated Dryer (FRD only)


Connect the power cable with a plug to the outlet as below.

Supply voltage; 115 VAC (voltage fluctuation \pm 10%), 60 Hz


Operation

- Before start up
 - Make sure all safety warnings, labels, and instructions have been read and understood before continuing.
 - Make sure any shipping materials, brackets, etc. are removed.
 - Check that the electric power source and ground have been firmly connected.
 - Make sure all pressure connections are tight.
 - Check to be certain all safety relief valves, etc., are correctly installed.
 - Check that all fuses, circuit breakers, etc., are the proper size.
 - Make sure the inlet filter is correctly installed.
 - Check that the drain valve is closed.

- Start-up and operation
 - Switch the electric source breaker on.
 - Check that the auto drainer is energized. (Option)
 - Turn the pressure switch (or, two pressure switches; SLT-10D*~**, DO NOT turn both switches on at same time.) on.
 - Open the discharge valve completely.
 - Check that the compressor operates without excessive vibration, unusual noises or leaks.
 - Close the discharge valve completely.
 - If the pressure does not rise on a three phase unit, stop the unit and turn the electric source breaker off and exchange the L1 and L2 connections inside the control box.

 **CAUTION**

In case of reverse rotation, the pressure does not rise and abnormal sound is heard. Immediately, turn the pressure switch off and turn the main electric source breaker off. And, exchange the L1 and L2 connections inside the control box.

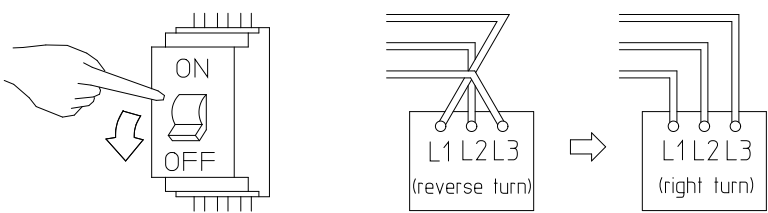

(Change L1 and L3 with each other)

Operation

- Check the discharge pressure. Also make sure the compressor stops at the setting pressure as below.

Model		Cut-out pressure (psi)
SLT-2*, 3 and 5-***		115
SLT-10D-**	Lead pump	115
	Second pump	105
SLT-2*H, 3H and 5H-***		145
SLT-10DH-**	Lead pump	145
	Second pump	135

- Check the discharge pressure. Also make sure the compressor starts at the setting pressure as below.

Model		Cut-in pressure (psi)
SLT-2*, 3 and 5-***		85
SLT-10D-**	Lead pump	85
	Second pump	75
SLT-2*H, 3H and 5H-***		115
SLT-10DH-**	Lead pump	115
	Second pump	105

Maintenance

Following maintenance is required at certain interval. These intervals are based on condition where ambient temperature is around 86 degree F. If your location is warmer or running condition is more severe, maintain within a shorter period. If warmer shorten the period approx. 30% from our recommendation at every 9 degree F.

Standard maintenance period is not our warranty period.

▪ **Standard maintenance period**

- For 115psi models (SLT-2*, 3, 5 and 10D-***)

Maintenance is to be done according to operating hours or period whichever comes first.

Item	Details	Maintenance period (every hours or periods)							Remark
		Daily	Every 400 Every 2 months	Every 2,500 yearly	Every 5,000 Every 2 years	Every 10,000 Every 4 years	Every 20,000 Every 8 years	Every 30,000 Every 12 years	
Drain (Option)	Air receiver	○				○☆			Change as necessary
Noise, vibration	Check	○							
Air intake filter	Clean		○	●					Whenever it is dirty
Safety valve	Check function		○						
V belt	Tension/replace		○ initial only	○		●☆			No slack or loose
Pressure gauge	Check			○					
Magnetic switch	Check or replace				○☆	●☆			
Motor, insulation	Check resistance				○☆				Change as necessary
Motor bearing	Check/replace						●☆		
Pulley	Check					○☆			Change as necessary
Pressure switch	Check function					○☆			Change as necessary
After cooler	Clean					○☆			Change as necessary
O rings	Replace					●☆			Use genuine Parts
Check valve	Check function					●☆			Change as necessary
Air end fan FS-OS fin	Clean					○☆			Whenever it is Dirty
Tip & dust seals Insulation pipe Grease up	Replace					●☆			Use genuine Grease
Air end								●☆	

○ Inspect ● Replace ☆ Consult with distributor who sold it to you

* Air intake filter is a wear part, and it is not free of charge even during warranty period. We suggest you keep it on hand.

Maintenance

- For 145psi models (SLT-2*H,3H,5H and 10DH-***)

Maintenance is to be done according to operating hours or period whichever comes first.

Item	Detail	Maintenance period (every hours or period)							
		Daily	Every 400 Every 2 months	Every 2,500 yearly	Every 5,000 Every 2 years	Every 10,000 Every 4 years	Every 15,000 Every 6 years	Every 20,000 Every 8 years	
Drain (Option)	Air receiver	○				○☆			Change as necessary
Noise, vibration		○							
Air intake filter	Clean		○	●					Whenever it is dirty
Safety valve	Check function		○						
V belt	Tension/replace		○ Initial only	○		●☆			Not slack or loose
Pressure gauge	Check			○					
Magnetic switch	Check or replace				○☆	●☆			
Motor insulation	Check resistance				○☆				Change as necessary
Motor bearing	Check or replace							●☆	
Pulley	Check					○☆			Change as necessary
Pressure switch	Check function					○☆			Change as necessary
After cooler	Clean					○☆			Change as necessary
O rings	Replace					●☆			Use genuine Parts
Check valve	Replace					●☆			Change as necessary
Air end fan FS-OS fin	Clean				○☆				Whenever it is dirty
Tip & dust seals Insulation pipe Grease up	Replace				●☆				Use genuine grease
Air end								●☆	

○ Inspect ● Replace ☆ Consult with distributor who sold it to you

* Air intake filter is a wear part and it is not free of charge even during warranty period. We suggest you keep it on hand.

- Replace filter element of mainline filter, final filter and membrane drier. (-FM*)

For mainline filter and final filter, the filter elements need to be replaced once every two year.

For membrane drier, the filter elements need to be replaced once a year.

Maintenance

▪ Dryer maintenance period

- A; SLT-5-FRD

Maintenance is to be done according to operating hours or period whichever comes first.

Item	Details	Maintenance period (every hours or periods)								Remarks
		Daily	Every 400 /1 month	Every 3 months	Every 2,500 /6 months	Every 5,000 /1 year	Every 7,500 /1.5 years	Every 10,000 /2 years	Every 20,000 /4 years	
Display of dryer	Check abnormalities	○								
Refrigerating Compressor	Must not have abnormal sound, smoke or smell	○								
	Must not leak oil			⊕						
Ventilation grille	Clean out dust and foreign particles		○							
Condenser	Clean dirt and dust attached to the fin			⊕						Each time dirt accumulates greatly
	Must not have oil leakage			⊕						
	Must not have corrosion			⊕						
Fan Motor	Check/replace								●☆	
Pipe	Check resistance								○☆	
Auto drain strainer	Clean/replace		○							Use neutral detergent for cleaning. Replace if operating failure continues after cleaning

○ Inspect ● Replace ☆ Consult with distributor who sold it to you

* Air intake filter is a wear part, and it is not free of charge even during warranty period. We suggest you keep it on hand.

The mark ⊕ is to implement certainly as items of legal inspection decided to be “the law related to proper control and rationalization of fluorocarbons use”. Inspect with eyes. Record and keep the results of maintenance until disposal and transfer of the product. Request repairing promptly when oil leakage is discovered from refrigerating compressor.

Repairing request inform authorized distributor by ANEST IWATA Air Engineering, Inc.

- Replace the mainline filter, final filter and membrane dryer. (-FRD*).

The mainline filter and final filters need to be replaced once every two years.

Maintenance

- How to carry out maintenance

- Intake filter

Blow dust off of it with air gun and replace if it is too dirty.

- Safety valve

Lift up stem of safety valve at around max pressure and check if air blows out.

- Belt tension

Check if V belt makes slipping sound at the startup due to decrease of V belt tension.

If so, you must readjust belt tension or replace belt.

If belt tension is less than figure in below chart, need to adjust belt tension again.

An exclusive tool is necessary to measure belt tension.

Ask our distributor to readjust belt tension when you need to readjust it.

Model	Readjustment standard load / Hz	Readjustment target load / Hz Tolerance ± 5	Replacement new belt target load / Hz Tolerance ± 5
SLT-2**_*** SLT-3*_*** SLT-5*_*** SLT-10D*_***	75	98	105

Troubleshooting guide

If you have any problems, please refer to the below chart.

As * marked items are difficult for you to remedy, please contact the shop you have purchased it from.

■ Compressor

Problem	Cause	Corrective action
Compressor unit does not start	Electric source is not ON.	Turn on electric source
	Electric source is not connected correctly.	Connect it correctly
	Pressure switch is in OPEN position	Reduce pressure in air receiver
Power is at supply connection and compressor does not start	Over load relay has tripped	See last entry of Troubleshooting guide
	Wrong or low voltage	Inspect incoming power supply and unit power rating.
	Starter has failed	Inspect, repair or replace contactor assembly *
	Pressure switch has failed	Inspect, repair or replace pressure switch assembly *
	Motor has failed	Inspect, repair or replace motor *
Compressor is running but will not make pressure	Drive belts came off or too loose	Inspect, tighten or replace drive belts *
	Clogged intake filter element	Clean or replace intake filter element
	Discharge air is leaking	Inspect and repair
	Pump has failed	Inspect, repair or replace pump *
	Pump running in the wrong direction	Correct power connections
Excessive noise or vibration	Drive belt has flipped or slipped	Inspect, repair or replace drive belt *
	Motor has failed	Inspect, repair or replace motor*
	Pump has failed	Inspect, repair or replace pump
Compressor running hot	Ambient temperature is high	Be sure not to exceed above 104 degree F
	Pump running at high pressure	Check tank pressure and pump outlet are not obstructed
	After cooler fins clogged	Clean after cooler
	Clogged intake filter element	Clean or replace intake filter element
Compressor turns on/off rapidly	Receiver tank has high level of water	Drain condensation
	Check valve has failed	Inspect, repair or replace check valve *
	Pressure switch has failed	Inspect, repair or replace pressure switch *
Safety valve blows off	Motor starter contacts welded shut	Inspect, repair or replace motor starter *
	Pressure switch has failed	Inspect, repair or replace pressure switch *
Motor overload has tripped	Pump has failed	Inspect, repair or replace pump *
	Motor has failed	Inspect, repair or replace motor*
	Improper wiring	Inspect and rewire *
	Wrong overload setting	Check setting of overload relay *
	Low voltage	Check incoming power supply

■ Auto drainer (option)

In case of any problem is occurred in the auto drainer, please read the enclosed manual for the auto drainer BEKOMAT31 or OPT-50 (Only small tank model)

■ Refrigerated Air Dryer (option)

In case of any problem is occurred in the refrigerated dryer, please read the enclosed manual for the Refrigerated Air Dryer.

Specifications

Compressor specifications

2HP

Item		SLT-2-30	SLT-2-60	SLT-2-80	SLT-2H-30	SLT-2H-60	SLT-2H-80
Operating pressure	psi	85 – 115			115 - 145		
Air delivery (*1)	cfm	5.3			4.5		
Tank size	GAL	30	60	80	30	60	80
Noise level (*2)	dB(A)	51					
Air outlet		NPT 1/2"					
Operating voltage		(1Phase, 115/208-230V, 60Hz) 3Phase, 208-230/460V, 60Hz					
Dimensions (LxWxH) (*3)	In.	42 x 29 x 38	49 x 29 x 44	64 x 29 x 44	42 x 29 x 38	49 x 29 x 44	64 x 29 x 44
Approx. mass	Lbs.	310	350	410	310	350	410

*1. Air delivery means average discharge air volume at the Maximum operating pressure converted into atmospheric pressure. It is not a warranted figure.

*2. Noise level is measured in an anechoic room.

*3. Dimensions are outer dimensions excluding extruding parts.

Item		SLT-2-FM-30	SLT-2-FM-60	SLT-2-FM-80	SLT-2H-FM-30	SLT-2H-FM-60	SLT-2H-FM-80
Operating pressure	psi	85 - 115			115 - 145		
Air delivery (*1)	cfm	4.8			4.0		
Tank size	GAL	30	60	80	30	60	80
Noise level (*2)	dB(A)	51					
Air outlet		NPT 3/8"					
Operating voltage		(1Phase, 115/208-230V, 60Hz) 3Phase, 208-230/460V, 60Hz					
Dimensions (LxWxH) (*3)	In.	42 x 29 x 38	49 x 32 x 44	64 x 32 x 44	42 x 29 x 38	49 x 32 x 44	64 x 32 x 44
Approx. mass	Lbs.	320	360	420	320	360	420

*1. Air delivery means average discharge air volume at the Maximum operating pressure converted into atmospheric pressure. It is not a warranted figure.

*2. Noise level is measured in an anechoic room.

*3. Dimensions are outer dimensions excluding extruding parts.

*4. Mainline filter / final filter (AM250C-N03D / AMC250C-N03D, only 30GAL tank model)

Nominal filtration rating: 0.3 / 0.01 μ m [Filtration efficiency: 99.9%]

Oil mist density at outlet: Max. 1.0 / 0.1 mg/m³ (ANR) [\pm 0.8ppm]

Filter element: AM-EL250 / AMD-EL250

*5. Membrane dryer (115psi; DM10-34CC (-N) / 145psi; DM10-34CC (-N)), -N; incl. filter, except small tank model

This is designed for approximately 54 / 23 degree F as a dew point and approximately 5.0 / 4.0 cfm as a final discharge flow. If more information is needed, please refer to the instruction manual that is enclosed.

Specifications

- 3HP

Item		SLT-3-30	SLT-3-60	SLT-3-80	SLT-3H-30	SLT-3H-60	SLT-3H-80
Operating pressure	psi	85 - 115			115 - 145		
Air delivery (*1)	cfm	7.8			6.4		
Tank size	GAL	30	60	80	30	60	80
Noise level (*2)	dB(A)	62					
Air outlet		NPT 1/2"					
Operating voltage		3Phase, 208-230/460V, 60Hz					
Dimensions (LxWxH) (*3)	In.	42 x 29 x 38	49 x 29 x 44	64 x 29 x 44	42 x 29 x 38	49 x 29 x 44	64 x 29 x 44
Approx. mass	Lbs.	320	360	420	320	360	420

*1. Air delivery means average discharge air volume at the Maximum operating pressure converted into atmospheric pressure. It is not a warranted figure.

*2. Noise level is measured in an anechoic room.

*3. Dimensions are outer dimensions excluding extruding parts.

Item		SLT-3-FM-30	SLT-3-FM-60	SLT-3-FM-80	SLT-3H-FM-30	SLT-3H-FM-60	SLT-3H-FM-80
Operating pressure	psi	85 - 115			115 - 145		
Air delivery (*1)	cfm	7.0			5.9		
Tank size	GAL	30	60	80	30	60	80
Noise level (*2)	dB(A)	62					
Air outlet		NPT 3/8"					
Operating voltage		3Phase, 208-230/460V, 60Hz					
Dimensions (LxWxH) (*3)	In.	42 x 29 x 38	49 x 32 x 44	64 x 32 x 44	42 x 29 x 38	49 x 32 x 44	64 x 32 x 44
Approx. mass	Lbs.	330	370	430	330	370	430

*1. Air delivery means average discharge air volume at the Maximum operating pressure converted into atmospheric pressure. It is not a warranted figure.

*2. Noise level is measured in an anechoic room.

*3. Dimensions are outer dimensions excluding extruding parts.

*4. Mainline filter / final filter (AM250C-N03D / AMC250C-N03D, only 30GAL tank model)

Nominal filtration rating: 0.3 / 0.01µm [Filtration efficiency: 99.9%]

Oil mist density at outlet: Max. 1.0 / 0.1 mg/m³ (ANR) [≒0.8ppm]

Filter element: AM-EL250 / AMD-EL250

*5. Membrane dryer (115psi; DM10-41CB (-N) / 145psi; DM10-34CC (-N)), -N; incl. filter, except small tank model

This is designed for approximately 49 / 43 degree F as a dew point and approximately 7.0 / 5.9 cfm as a final discharge flow. If more information is needed, please refer to the instruction manual that is enclosed.

Specifications

- 5HP

Item		SLT-5-30	SLT-5-60	SLT-5-80	SLT-5H-30	SLT-5H-60	SLT-5H-80
Operating pressure	psi	85 - 115			115 - 145		
Air delivery (*1)	cfm	14.8			11.7		
Tank size	GAL	30	60	80	30	60	80
Noise level (*2)	dB(A)	68					
Air outlet		NPT 1/2"					
Operating voltage		3Phase, 208-230/460V, 60Hz					
Dimensions (LxWxH) (*3)	In.	42 x 29 x 38	49 x 29 x 44	64 x 29 x 44	42 x 29 x 38	49 x 29 x 44	64 x 29 x 44
Approx. mass	Lbs.	340	380	440	340	380	440

*1. Air delivery means average discharge air volume at the Maximum operating pressure converted into atmospheric pressure. It is not a warranted figure.

*2. Noise level is measured in an anechoic room.

*3. Dimensions are outer dimensions excluding extruding parts.

Item		SLT-5-FM-30	SLT-5-FM-60	SLT-5-FM-80	SLT-5H-FM-30	SLT-5H-FM-60	SLT-5H-FM-80
Operating pressure	psi	85 - 115			115 - 145		
Air delivery (*1)	cfm	13.4			10.9		
Tank size	GAL	30	60	80	30	60	80
Noise level (*2)	dB(A)	68					
Air outlet		NPT 3/8"					
Operating voltage		3Phase, 208-230/460V, 60Hz					
Dimensions (LxWxH) (*3)	In.	42 x 29 x 38	49 x 32 x 44	64 x 32 x 44	42 x 29 x 38	49 x 32 x 44	64 x 32 x 44
Approx. mass	Lbs.	350	390	450	350	390	450

*1. Air delivery means average discharge air volume at the Maximum operating pressure converted into atmospheric pressure. It is not a warranted figure.

*2. Noise level is measured in an anechoic room.

*3. Dimensions are outer dimensions excluding extruding parts.

*4. Mainline filter / final filter (AM250C-N03D / AMC250C-N03D, only 30GAL tank model)

Nominal filtration rating: 0.3 / 0.01µm [Filtration efficiency: 99.9%]

Oil mist density at outlet: Max. 1.0 / 0.1 mg/m³ (ANR) [≒0.8ppm]

Filter element: AM-EL250 / AMD-EL250

*5. Membrane dryer (115psi; DM10-47CA (-N) / 145psi; DM10-41CB (-N)), -N; incl. filter, except small tank model

This is designed for approximately 55 / 41 degree F as a dew point and approximately 13.4 / 10.9 cfm as a final discharge flow. If more information is needed, please refer to the instruction manual that is enclosed.

Specifications

- 10HP

Item		SLT-10D	SLT-10DH
Operating pressure	psi	85 - 115 (Lead pump)	115 - 145 (Lead pump)
		75 - 105 (Second pump)	105 - 135 (Second pump)
Air delivery (*1)	cfm	29.6	23.4
Tank size	GAL	120	
Noise level (*2)	dB(A)	72	
Air outlet		NPT 3/4"	
Operating voltage		3Phase, 208-230/460V, 60Hz	
Dimensions (LxWxH) (*3)	In.	68 x 37 x 47	
Approx. mass	Lbs.	705	

*1. Air delivery means average discharge air volume at the Maximum operating pressure converted into atmospheric pressure. It is not a warranted figure.

*2. Noise level is measured in an anechoic room.

*3. Dimensions are outer dimensions excluding extruding parts.

Item		SLT-10D-FM	SLT-10DH-FM
Operating pressure	psi	85 - 115 (Lead pump)	115 - 145 (Lead pump)
		75 - 105 (Second pump)	105 - 135 (Second pump)
Air delivery (*1)	cfm	26.8	21.3
Tank size	GAL	120	
Noise level (*2)	dB(A)	72	
Air outlet		NPT 3/4"	
Operating voltage		3Phase, 208-230/460V, 60Hz	
Dimensions (LxWxH) (*3)	In.	75 x 37 x 47	
Approx. mass	Lbs.	720	

*1. Air delivery means average discharge air volume at the Maximum operating pressure converted into atmospheric pressure. It is not a warranted figure.

*2. Noise level is measured in an anechoic room.

*3. Dimensions are outer dimensions excluding extruding parts.

*4. Mainline filter (AM450C-N06D)

Nominal filtration rating: 0.3 μ m [Filtration efficiency: 99.9%]

Oil mist density at outlet: Max. 1.0 mg/m³ (ANR) [\approx 0.8ppm]

Filter element: AM-EL450

*5. Membrane dryer (115psi; DM20-53CA-N / 145psi; DM20-48CA-N)

This is designed for approximately 55 / 42 degree F as a dew point and approximately 26.8 / 21.3 cfm as a final discharge flow. If more information is needed, please refer to the instruction manual that is enclosed.

Specifications

- 5HP with Refrigerated Dryer

Item		SLT-5-FRD
Operating pressure	psi	85-115
Air delivery (*1)	cfm	14.8
Tank size	GAL	60
Noise level (*2)	dB(A)	68
Air outlet		NPT 1/2"
Operating voltage		3Phase, 208-230/460V, 60Hz
Dimensions (LxWxH) (*3)	In.	68 x 32 x 47
Approx. mass	Lbs.	420

*1. Air delivery means average discharge air volume at the Maximum operating pressure converted into atmospheric pressure. It is not a warranted figure.

*2. Noise level is measured in an anechoic room.

*3. Dimensions are outer dimensions excluding extruding parts.

*4. Mainline filter (AM350C-N04D)

Nominal filtration rating: 0.3 μ m [Filtration efficiency: 99.9%]

Oil mist density at outlet: Max. 1.0 mg/m³ (ANR) [\approx 0.8ppm]

*5. Final filter (AMD350C-N04D)

Nominal filtration rating: 0.01 μ m [Filtration efficiency: 99.9%]

Oil mist density at outlet: Max. 0.1 mg/m³ (ANR) [\approx 0.8ppm]


*6. Refrigerated dryer

This is designed for approximately 55 degree F as a dew point at Maximum operating pressure. It is not a warranted figure. If more information is needed, please refer to the instruction manual that is enclosed.


Appendix

- Outer dimensions

- SLT-2-30, SLT-3 and SLT-5-30, (SLT-2H-30, SLT-3H-30 and SLT-5H-30)

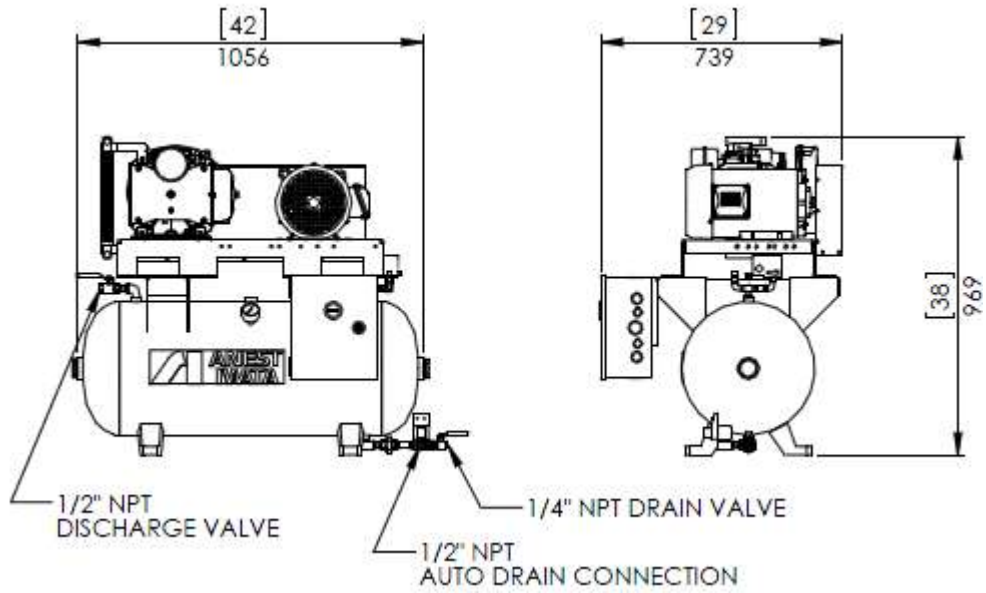


- SLT-2-FM-30, SLT-3*-FM-30 and SLT-5*-FM-30, (SLT-2H-FM-30, SLT-3H-FM-30 and SLT-5H-FM-30)

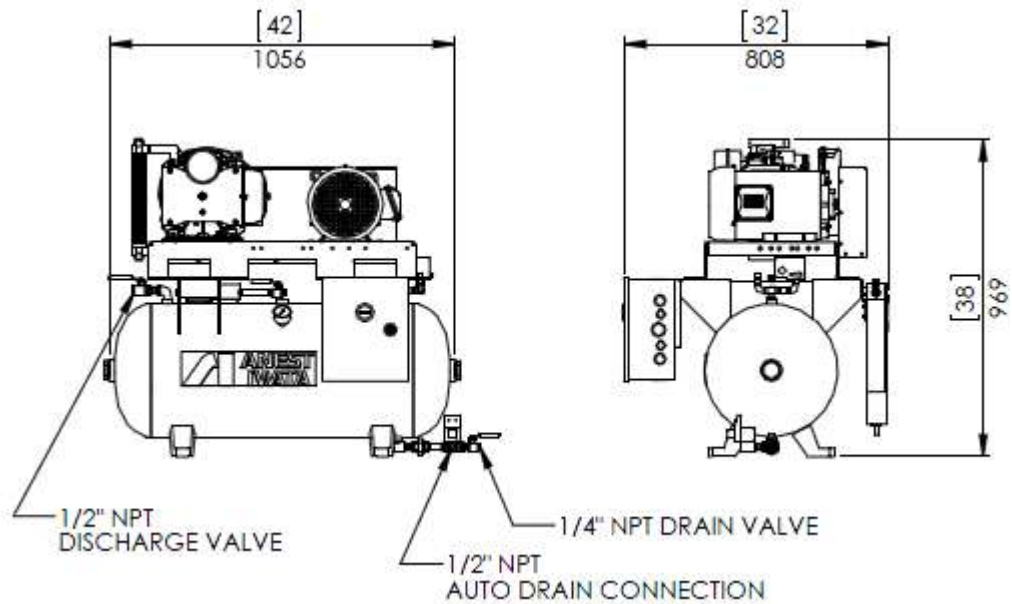


Appendix

- SLT-5-FRD-60

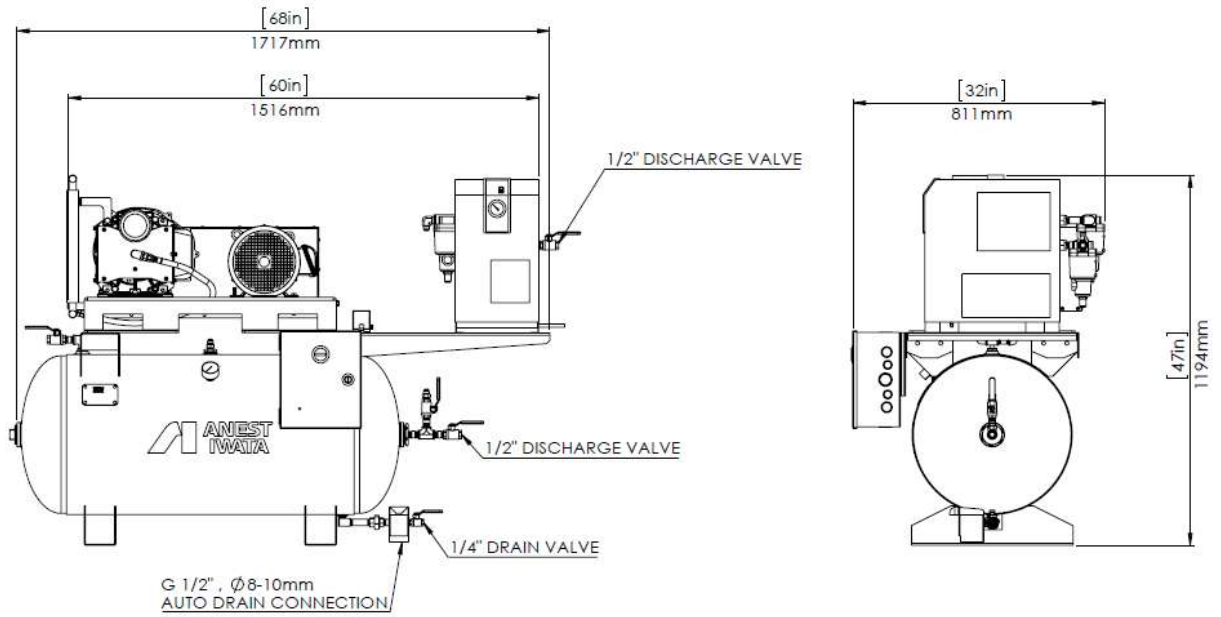


- SLT-10D and SLT-10DH

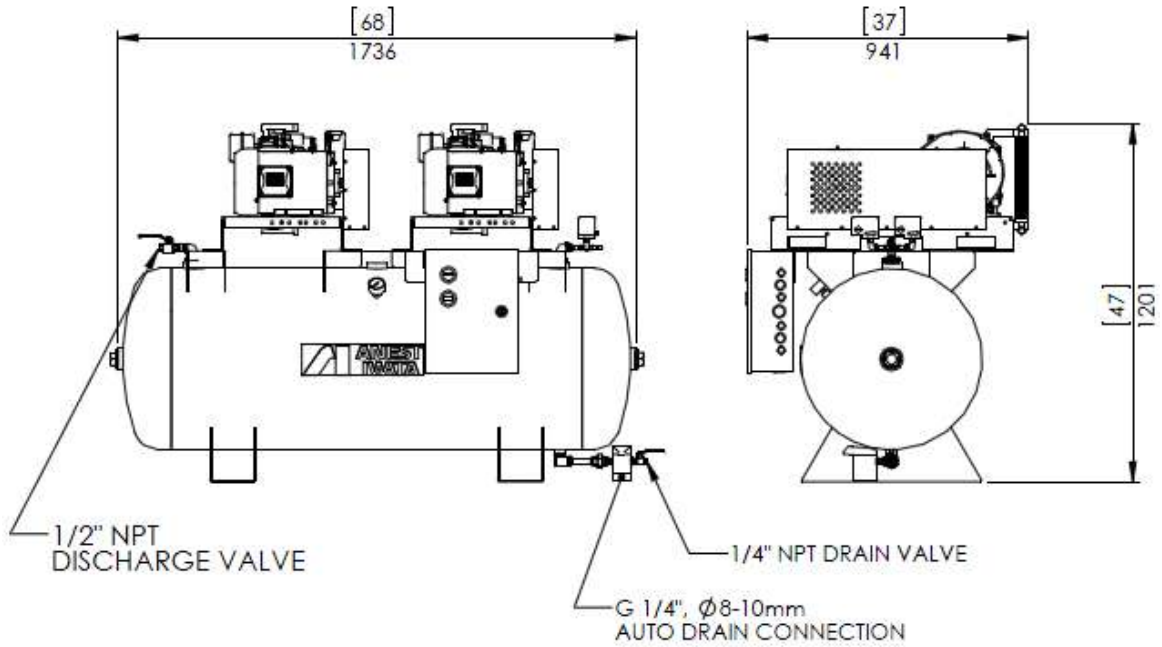


Appendix

- SLT-10D and SLT-10DH

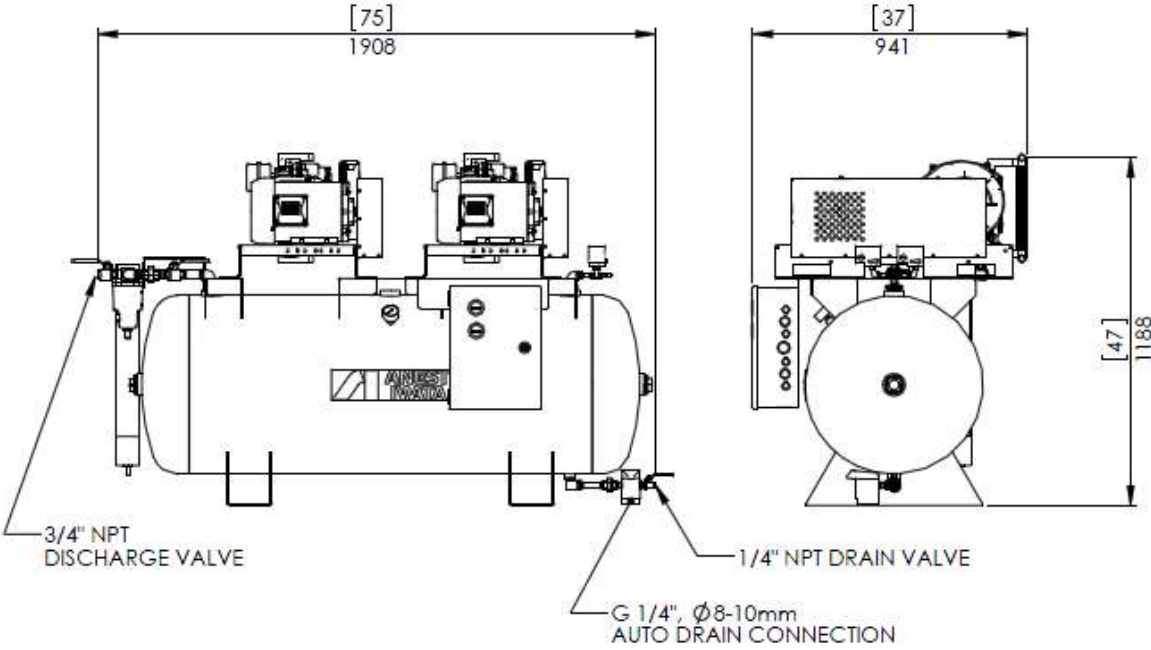


Appendix

- Circuit diagram
 - SLT-2(H)-S115

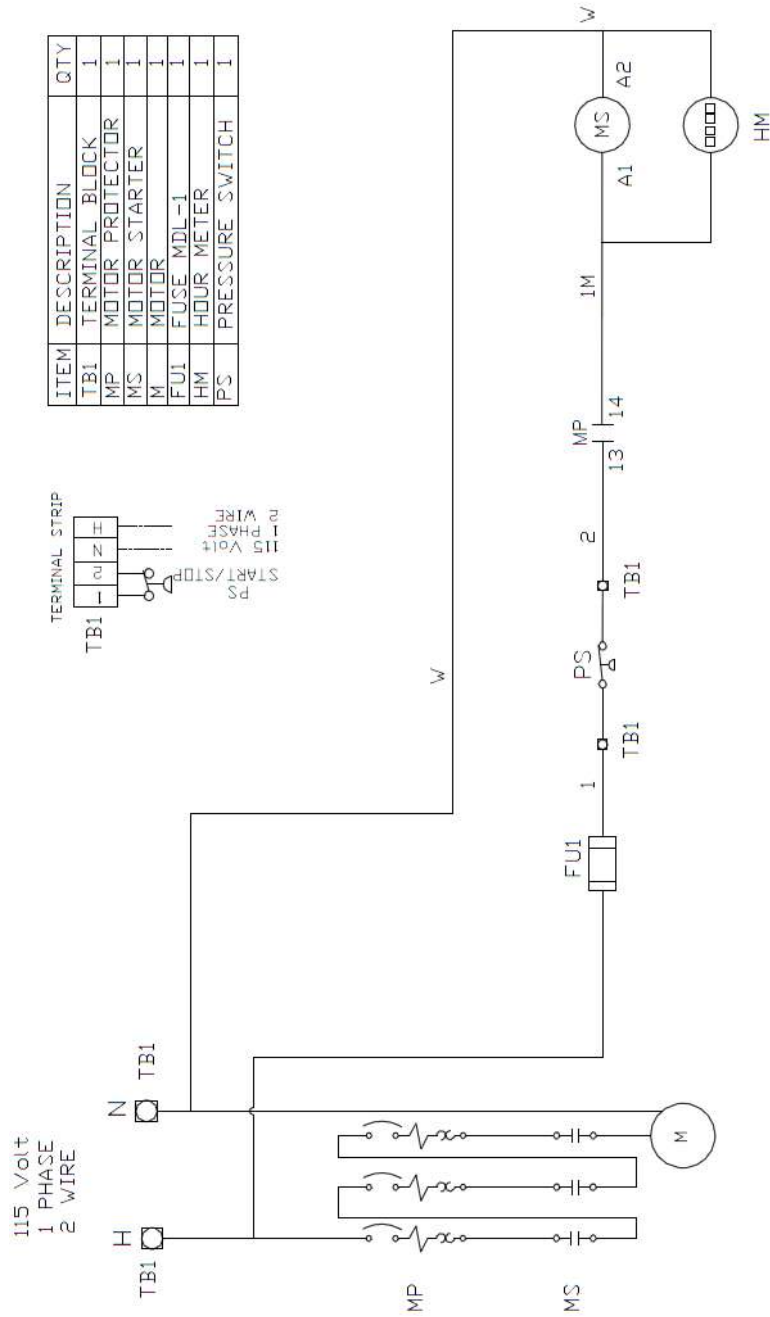


Appendix

- Circuit diagram
 - SLT-2(H)/3(H)/5(H)-S208/230

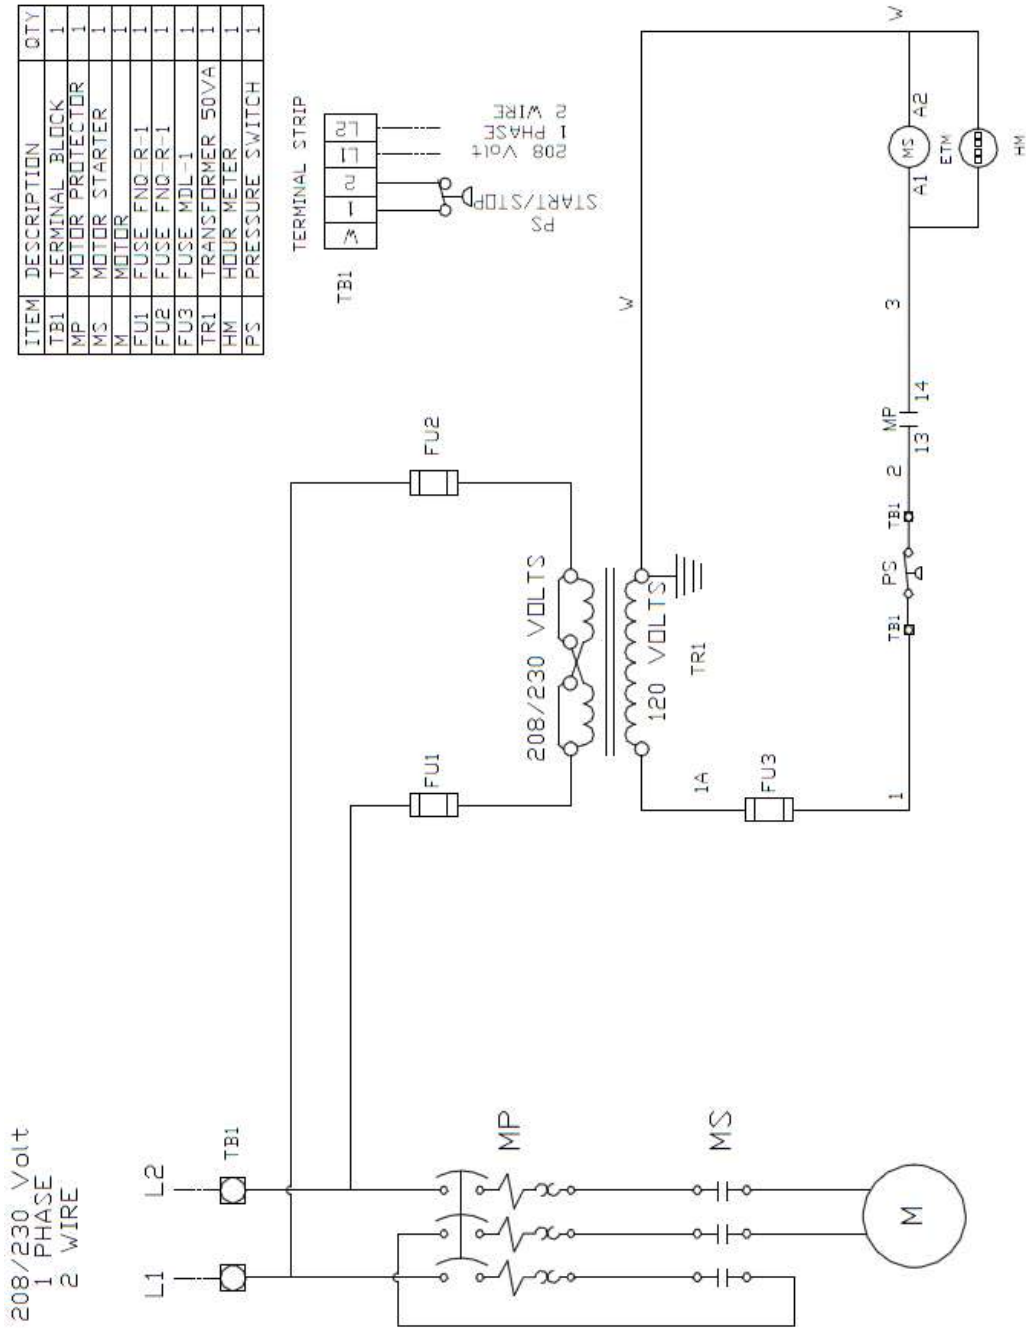

Appendix



- SLT-2(H)/3(H)/5(H)–T208/230/460

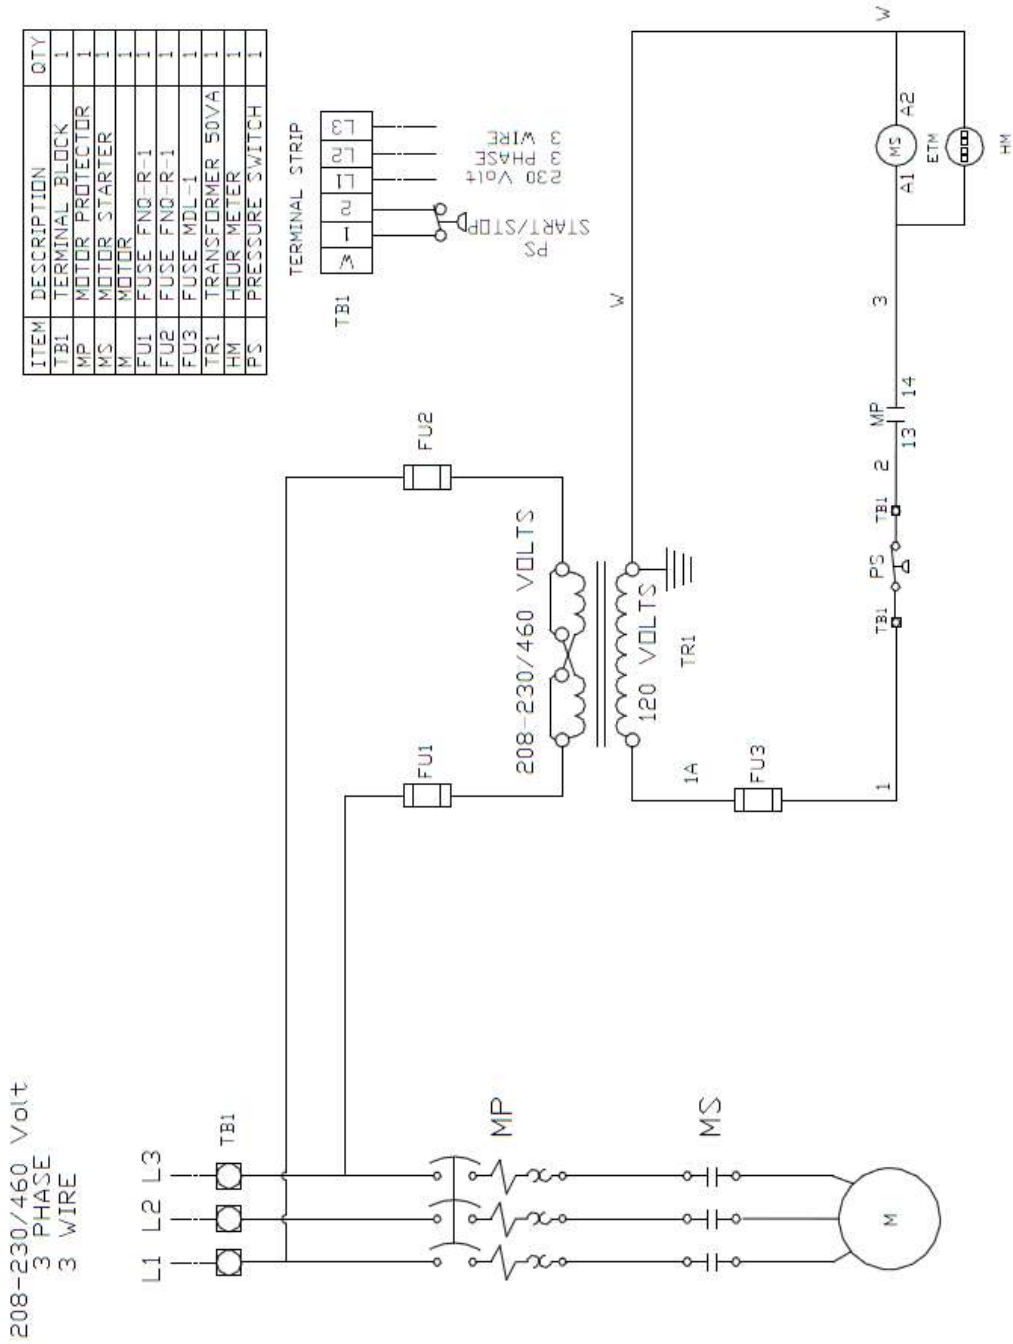


Appendix

- SLT - 10D(H) – T208/230/460

208/230/460 Volt
3 PHASE
3 WIRE

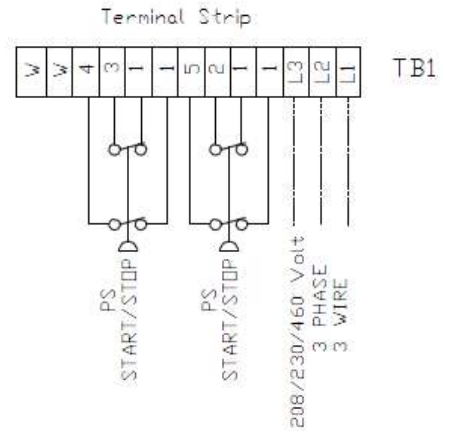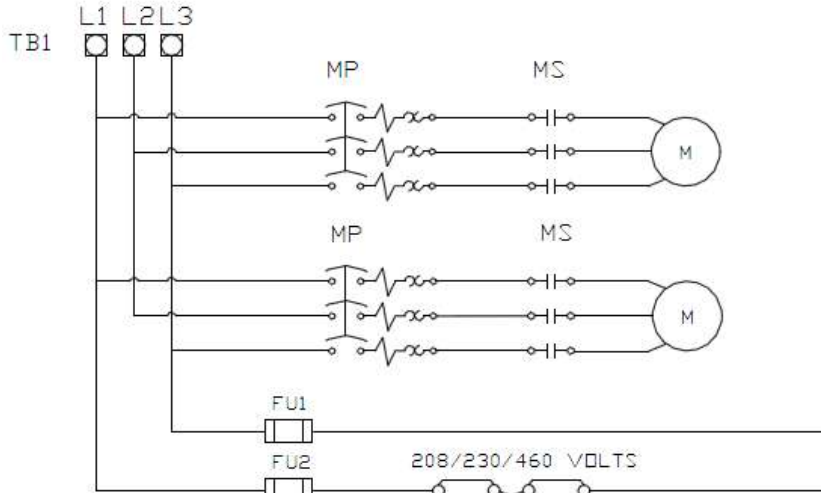

ITEM	DESCRIPTION	QTY
TB1	TERMINAL BLOCK	1
MP	MOTOR PROTECTOR	2
MS	MOTOR STARTER	2
M	MOTOR	2
FU1	FUSE FNO-R-1	1
FU2	FUSE FNO-R-1	1
FU3	FUSE MDL-1	1
TR1	TRANSFORMER 50VA	1
HM	HRUR METER	2
TDR	TIMER RELAY	1
PS	PRESSURE SWITCH	2

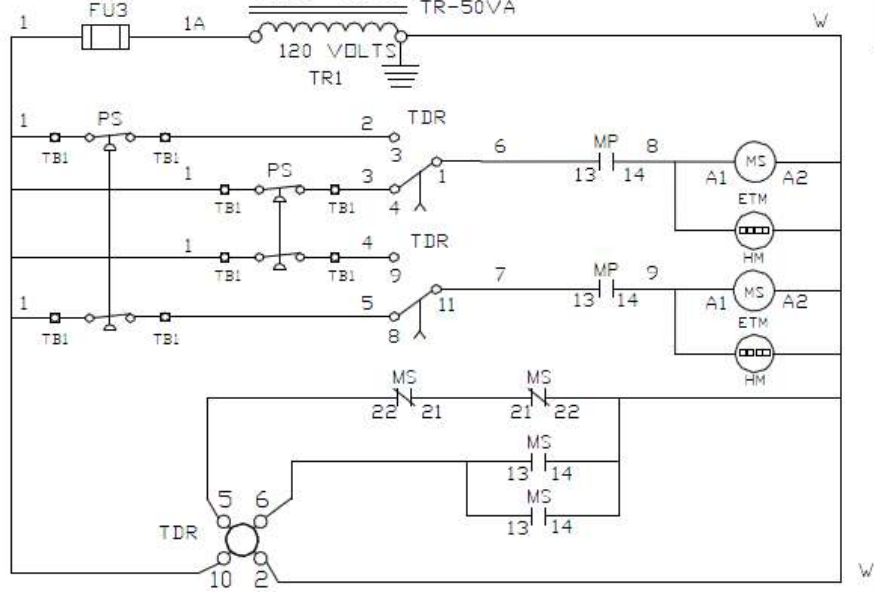

Warranty

■ Compressor Warranty and Remedies

- (a) **General.** Anest Iwata - Air Engineering warrants each Compressor System, Compressor Air-End, or Anest Iwata branded accessory (collectively “products”; individually each a “product”) to be free from defects in material and workmanship (“Defects”) at the date of shipment. EXCEPT AS SET FORTH BELOW, NO OTHER WARRANTY, WHETHER EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL EXIST IN CONNECTION WITH THE SALE OR USE OF SUCH PRODUCTS. TO THE EXTENT PERMITTED BY LAW ANY AND ALL IMPLIED WARRANTIES ARE EXCLUDED. All claims under this warranty must be made in writing and delivered to Anest Iwata Air Engineering, or such claim shall be barred. Upon timely receipt of a claim, Anest Iwata Air Engineering shall inspect the product claimed to have a defect, and Anest Iwata Air Engineering shall repair, or, at its option, replace, free of charge, any product which it determines to have had a defect at the time of shipment from Anest Iwata Air Engineering; provided, however, that if circumstances are such as to preclude the remedying of defect by repair or replacement, Anest Iwata Air Engineering shall, upon return of the product, refund to buyer any part of the purchase price of such products paid to Anest Iwata Air Engineering. Freight for the returning products to Anest Iwata Air Engineering for inspection shall be paid by buyer. The warranties and remedies herein are the sole and exclusive remedy for any breach of warranty or for any other claim based on any defect, or non-performance of the products, whether based upon contract, warranty or negligence.
- (b) **Initial period of warranty—Parts and Labor.** Anest Iwata Air Engineering warrants and represents all products shall be free from defects for the first twelve (12) months from the date of shipment by Anest Iwata Air Engineering, or five thousand (5,000) hours of use, whichever occurs first. During such warranty period, Anest Iwata Air Engineering shall be fully liable for all defects in the products (the “product defects”), i.e., all costs of repair or replacement, which may include “in and out” charges, so long as the products are located in the continental United States, and the products are reasonably located and accessible by service personnel for removal. “In and out” charges include the costs of removing a product from buyer’s equipment for repair or replacement.
- (c) **Additional period of Warranty—Parts Only (No Labor).** In addition to the above, Anest Iwata Air Engineering warrants each Anest Iwata branded compressor air-end, shall be free of defects for a period of eighteen months from the date of shipment of product, or 10,000 hours of use, whichever occurs first. Supplier’s repair or replacement of any product shall not extend the period of any warranty of any product. This warranty applies to the exchange of part(s) found to be defective by an authorized Anest Iwata service center only.
- (d) **Coverage.** The above mentioned warranty applies to Anest Iwata Air Engineering manufactured units or systems only.
- (e) **Exceptions.** Notwithstanding anything to the contrary herein, Anest Iwata Air Engineering shall have no warranty obligations with respect to products:
- (i) That have not been installed in accordance with Anest Iwata Air Engineering’s Written specifications and instructions;
 - (ii) That have not been maintained in accordance with Anest Iwata Air Engineering’s written instructions;
 - (iii) that have been materially modified without the prior written approval of Anest Iwata Air Engineering; or
 - (iv) That experience failures resulting from operation, either intentional or otherwise, in excess of rated capacities or in an otherwise improper manner.
- (f) The warranty provided herein shall not apply to: (i) any defects arising from corrosion, abrasion, use of insoluble lubricants, or negligent attendance to or faulty operation of the products; (ii) ordinary wear and tear of the products; or (iii) defects arising from abnormal conditions of temperature, dirt or corrosive matter; (iv) any OEM component which is shipped by Anest Iwata Air Engineering with the original manufacturer’s warranty, which shall be the sole applicable warranty for such component.

Limitation of liability. TO THE EXTENT ALLOWABLE UNDER APPLICABLE LAW, NOT WITHSTANDING ANYTHING TO THE CONTRARY HEREIN, UNDER NO CIRCUMSTANCES SHALL ANEST IWATA AIR ENGINEERING BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, PUNITIVE, SPECULATIVE OR INDIRECT LOSSES OR DAMAGES WHATSOEVER ARISING OUT OF OR IN ANY WAY RELATED TO ANY OF THE PRODUCTS OR GOODS SOLD OR AGREED TO BE SOLD BY ANEST IWATA AIR ENGINEERING TO BUYER. TO THE EXTENT ALLOWABLE UNDER APPLICABLE LAW, ANEST IWATA AIR ENGINEERING’S LIABILITY IN ALL EVENTS IS LIMITED TO AND SHALL NOT EXCEED THE PURCHASE PRICE PAID.

Warranty Disclaimer. Anest Iwata Air Engineering has made a diligent effort to illustrate and describe the products in this literature accurately; however, such illustrations and descriptions are for the sole purpose of identification, and do not express or imply a warranty that the products are merchantable, or fit for a particular purpose, or that the products will necessarily conform to the illustrations or descriptions.

Product Suitability. Many jurisdictions have codes and regulations governing sales, construction, installation, and/or use of products for certain purposes, which may vary from those in neighboring areas. While Anest Iwata Air Engineering attempts to assure that its products comply with such codes, it cannot guarantee compliance, and cannot be responsible for how the product is installed or used. Before purchase and use of a product, please review the product applications, and national and local codes and regulations, and be sure that the product, installation, and use will comply with them.

Claims. Claims pertaining to the products, with the exception of warranty claims, must be filed with Anest Iwata Air Engineering within 6 months of the invoice date, or they will not be honored. Prices, discounts, and terms are subject to change without notice or as stipulated in specific product quotations. All agreements are contingent upon strikes, accidents, or other causes beyond our control. All shipments are carefully inspected and counted before leaving the factory. Please inspect carefully any receipt of products noting any discrepancy or damage on the carrier’s freight bill at the time of delivery. Discrepancies or damage which obviously occurred in transit are the carrier’s responsibility and related claims should be made promptly directly to the carrier. Returned products will not be accepted without prior written authorization by Anest Iwata Air Engineering and deductions from invoices for shortage or damage claims will not be allowed. **UNLESS OTHERWISE AGREED TO IN WRITING, THESE TERMS AND CONDITIONS WILL CONTROL IN ANY TRANSACTION WITH ANEST IWATA AIR ENGINEERING** Any different or conflicting terms as may appear on any order form now or later submitted by the buyer. All orders are subject to acceptance by Anest Iwata Air Engineering.

Anest Iwata Air Engineering 5325 Muhlhauser Road, Hamilton, Ohio 45011 USA 800-440-0282



ANEST IWATA AIR ENGINEERING, Inc.

www.anestiwata.com

inquiry@anestiwata.com

Toll Free (800)440-0282